

WL6010

lumina 2 tasta cu simbol

Descriere	Amb.	Art Nr.
Tasta cu simbol clopotel -alb	18	WL6010
Tasta cu simbol clopotel -crem	18	WL6011
Tasta cu simbol lampa -alb	18	WL6020
Tasta cu simbol scara -alb	18	WL6030
Tasta cu simbol scara -crem	18	WL6031
Tasta cu ind. lum. simb. clopotel -alb	18	WL6110
Tasta cu ind. lum. simbol lampa -alb	18	WL6120
Tasta cu ind. lum. simbol lampa -crem	18	WL6121
Tasta cu ind. lum. simbol scara -alb	18	WL6130



WL6310

lumina 2 tasta RTV


Descriere	Amb.	Art Nr.
Tasta RTV-alb	18	WL6310
Tasta RTV-crem	18	WL6311



WL7010

lumina 2 tasta falsa


Descriere	Amb.	Art Nr.
Tasta falsa-alb	12	WL7010
Tasta falsa-crem	12	WL7011

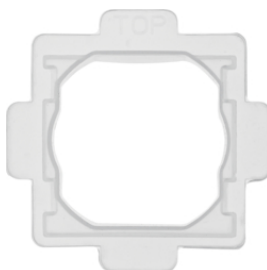

WL7023

Kit de etansare IP44

Descriere	Amb.	Art Nr.
Kit de etansare IP44	18	WL7023

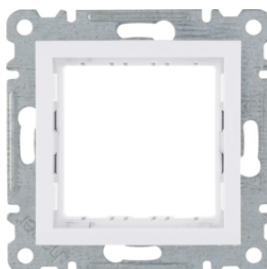

WL2510

Tasta adaptor 50x50mm

Descriere	Amb.	Art Nr.
Adaptor montaj aparataj 45x45mm, alb	24	WL2510
Adaptor montaj aparataj 45x45mm, crem	24	WL2511